




IMPORTANT PLEASE READ CAREFULLY

Plate Lifting Clamps

THE CORRECT USE OF PLC CLAMPS

1. Inspect the clamp for any defects.
2. Release locking pin and securely fit the clamp onto plate.
3. Push locking pin into place and ensure clamp is securely tight on plate.

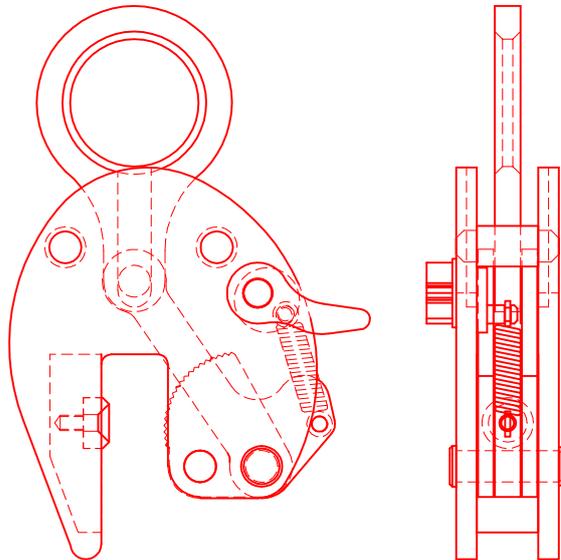

Horizontal to Vertical Plate Lifting Clamp has been developed to provide the user with a safe to use and easy to handle plate lifting tool.

The locking mechanism provides an additional safety feature for the operator.

WARNING

3. Do not exceed the Safe Working Load.
4. Ensure that all persons using this equipment are properly trained in performing lifting operations.

Guidelines for the inspection and safe use of
'SUPERCLAMP' Equipment.

Follow all requirements of law, rules and regulations applicable in your country pertaining to lifting operations, ensuring all maintenance, testing, inspection and operator training requirements are strictly adhered to. This is in your interest, and can prevent fatal accidents and industrial disaster.

RILEY (LIFTING EQUIPMENT) LTD

REGISTERED OFFICE: HOPE BUILDING, DOCKRAY STREET, COLNE, LANCASHIRE, BB8 9HT

TELEPHONE: (01282) 867177 (Six Lines) FAX: (01282) 863698

OVERSEAS TELEPHONE: +441 282 867177 OVERSEAS FAX: +441 282 863698

EMAIL: info@superclamp.co.uk WEB SITE: www.superclamp.co.uk