




IMPORTANT PLEASE READ CAREFULLY

HPC, Plate Lifting Clamps

THE CORRECT USE OF HPC CLAMPS

1. Ensure the Fixed Jaw and Cam is free from any defects.
2. Apply the clamp to the plate. Ensure the plate is full depth of jaw opening.

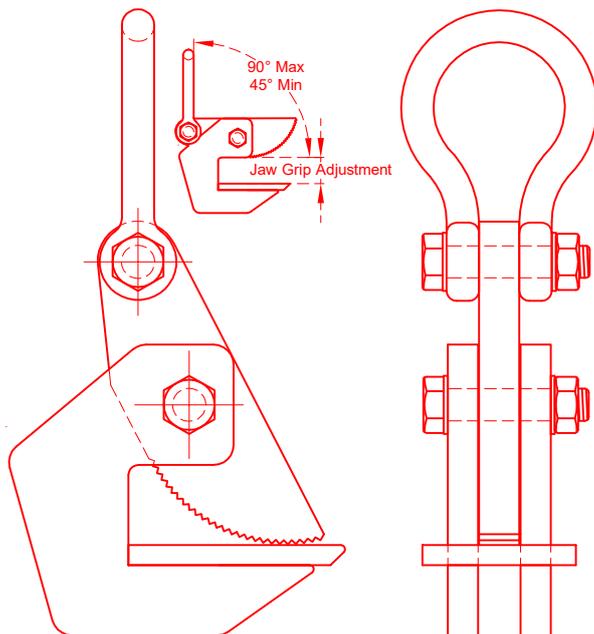

Horizontal plate lifting clamps are designed to be used as original 'Superclamp' pairs only.

Their rigidly competent designs incorporate an easily replaceable toothed cam toe which ensures maximum grip and hold. The standard jaw apertures allow for a wide range of mild steel plate thickness to be horizontally lifted. Parts are easily replaceable.

'Superclamp' horizontal plate lifting clamps are equipped with a lifting shackle, and easily replaceable components.

WARNING

3. Do not exceed the Safe Working Load.
4. Do not lift more than one plate at a time.
5. Ensure that all persons using this equipment are properly trained in performing lifting operations.

Guidelines for the inspection and safe use of
'SUPERCLAMP' Equipment.

Follow all requirements of law, rules and regulations applicable in your country pertaining to lifting operations, ensuring all maintenance, testing, inspection and operator training requirements are strictly adhered to. This is in your interest, and can prevent fatal accidents and industrial disaster.

RILEY (LIFTING EQUIPMENT) LTD

REGISTERED OFFICE: HOPE BUILDING, DOCKRAY STREET, COLNE, LANCASHIRE, BB8 9HT

TELEPHONE: (01282) 867177 (Six Lines) FAX: (01282) 863698

OVERSEAS TELEPHONE: +441 282 867177 OVERSEAS FAX: +441 282 863698

EMAIL: info@superclamp.co.uk WEB SITE: www.superclamp.co.uk