




IMPORTANT PLEASE READ CAREFULLY

PFC Permanently Fixed Clamps

THE CORRECT USE OF PFC CLAMPS

1. Inspect the clamp for any defects.
2. Apply the clamp to the beam. Wind the clamp to required adjustment
3. Ensure the clamp is securely tightened onto the beam using hand torque.

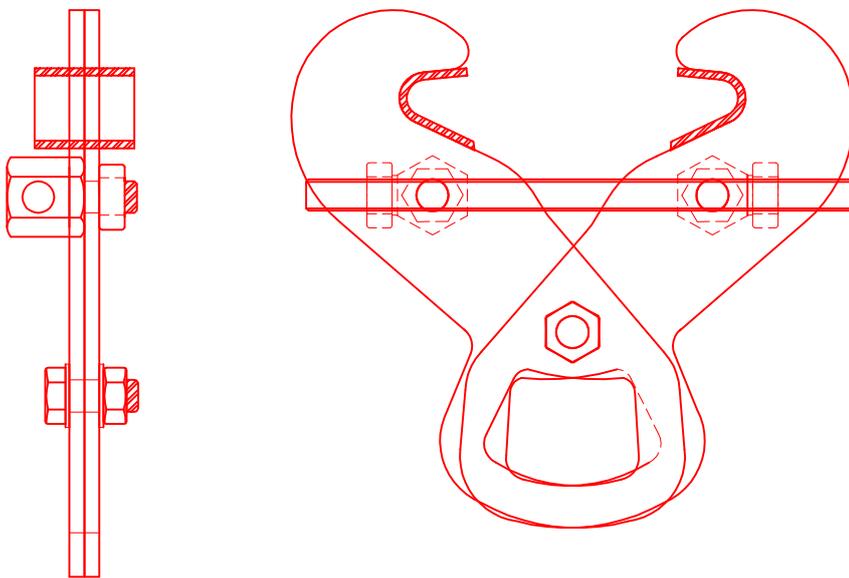

Permanently Fixed Girderclamps are designed for light industrial applications; particularly where a permanent overhead anchor point is required. These high strength inexpensive lightweight clamps are excellent for applications in small garages and hobbyist workshops.

As with all 'SUPERCLAMP' products each PFC unit is proof loaded and supplied with a certificate of test and inspection.

WARNING

4. Do not exceed the Safe Working Load.
5. Ensure that all persons using this equipment are properly trained in performing lifting operations.

Guidelines for the inspection and safe use of
'SUPERCLAMP' Equipment.

Follow all requirements of law, rules and regulations applicable in your country pertaining to lifting operations, ensuring all maintenance, testing, inspection and operator training requirements are strictly adhered to. This is in your interest, and can prevent fatal accidents and industrial disaster.

RILEY (LIFTING EQUIPMENT) LTD

REGISTERED OFFICE: HOPE BUILDING, DOCKRAY STREET, COLNE, LANCASHIRE, BB8 9HT

TELEPHONE: (01282) 867177 (Six Lines) FAX: (01282) 863698

OVERSEAS TELEPHONE: +441 282 867177 OVERSEAS FAX: +441 282 863698

EMAIL: info@superclamp.co.uk WEB SITE: www.superclamp.co.uk