




IMPORTANT PLEASE READ CAREFULLY

ES Girderclamps

THE CORRECT USE OF ES ADJUSTABLE GIRDERCLAMPS

1. Inspect the clamp for any defects.
2. Apply the clamp to the beam. Wind the clamp to required adjustment using handle provided
3. Ensure the clamp is securely tightened onto the beam using hand torque.

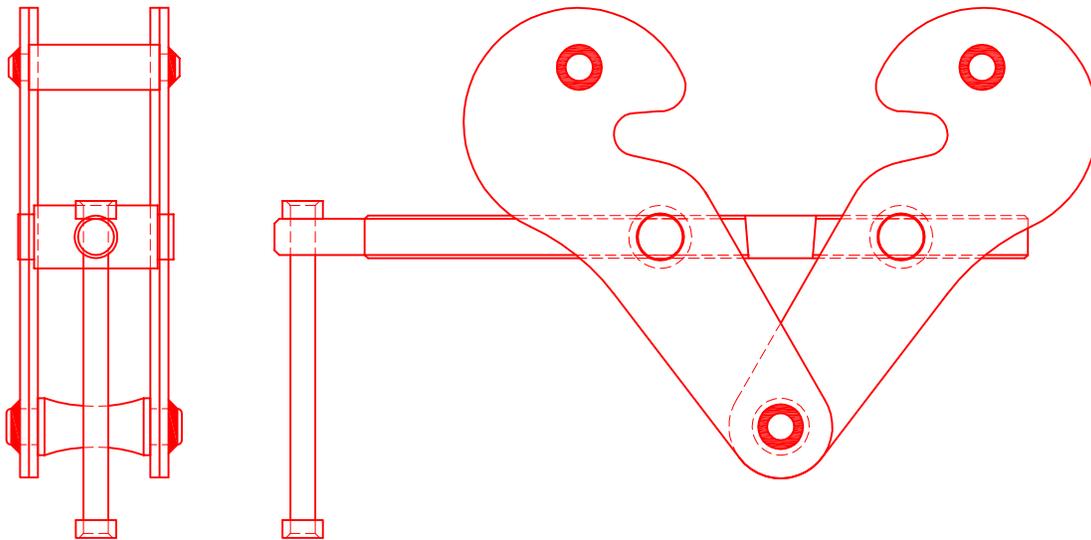

A lightweight low cost girderclamp with low headroom anchor point, makes this a highly recommendable unit for most industrial applications.

WARNING

4. Do not exceed the Safe Working Load.
5. Ensure that all persons using this equipment are properly trained in performing lifting operations.

Guidelines for the inspection and safe use of
'SUPERCLAMP' Equipment.

Follow all requirements of law, rules and regulations applicable in your country pertaining to lifting operations, ensuring all maintenance, testing, inspection and operator training requirements are strictly adhered to. This is in your interest, and can prevent fatal accidents and industrial disaster.

RILEY (LIFTING EQUIPMENT) LTD

REGISTERED OFFICE: HOPE BUILDING, DOCKRAY STREET, COLNE, LANCASHIRE, BB8 9HT

TELEPHONE: (01282) 867177 (Six Lines) FAX: (01282) 863698

OVERSEAS TELEPHONE: +441 282 867177 OVERSEAS FAX: +441 282 863698

EMAIL: info@superclamp.co.uk WEB SITE: www.superclamp.co.uk