




IMPORTANT PLEASE READ CAREFULLY

Pipe Hooks

THE CORRECT USE OF PIPE HOOKS

1. Inspect the clamp for any defects.
2. Fit Pipe Hook to inner wall of pipe.
3. Ensure the pipe hook is securely fitted to pipe.
4. Apply load using shackle fitted with product.

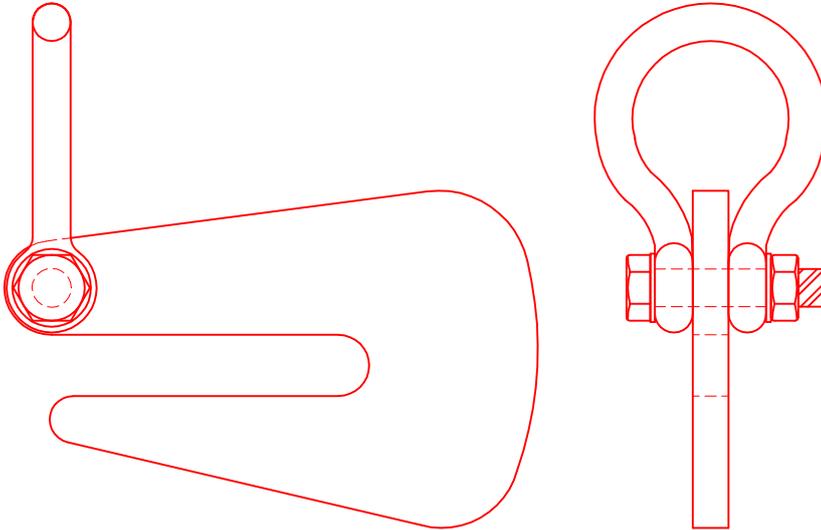

Pipe hooks are designed to be used in pairs for efficient and easy handling of pipes.

WARNING

5. Do not exceed the Safe Working Load.
6. Ensure that all persons using this equipment are properly trained in performing lifting operations.

Guidelines for the inspection and safe use of
'SUPERCLAMP' Equipment.

Follow all requirements of law, rules and regulations applicable in your country pertaining to lifting operations, ensuring all maintenance, testing, inspection and operator training requirements are strictly adhered to. This is in your interest, and can prevent fatal accidents and industrial disaster.

RILEY (LIFTING EQUIPMENT) LTD

REGISTERED OFFICE: HOPE BUILDING, DOCKRAY STREET, COLNE, LANCASHIRE, BB8 9HT

TELEPHONE: (01282) 867177 (Six Lines) FAX: (01282) 863698

OVERSEAS TELEPHONE: +441 282 867177 OVERSEAS FAX: +441 282 863698

EMAIL: info@superclamp.co.uk WEB SITE: www.superclamp.co.uk